 


IMPORTANT

The altitude is displayed with a delay in order to substantially extend battery life. For this reason, a Victorinox Altimeter may not be used to measure altitudes during parachuting or similar types of speed/air pressure sports.

MAINTENANCE

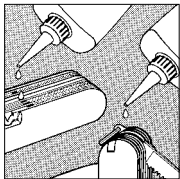

Extend each implement halfway, then apply a few drops of oil at the base of that implement. For blades that do not move easily, open and close a few times in warm water, then dry and oil. This care will ensure a lifetime of faithful service.

ALTIMETER BATTERY CHANGE

The Altimeter comes equipped with a 3 volt lithium battery (Panasonic CR 1225, 3V). To change the battery, use the mini-screwdriver to open the battery compartment and replace the battery (see illustration below).



VICTORINOX GUARANTEE

Victorinox guarantees all Swiss Army Knives to be of first class stainless steel, and provides a lifetime guarantee against any defects in material and workmanship.

WARRANTY

Victorinox Swiss Army, Inc., warrants this Victorinox product to be free from defects in material and workmanship for the entire life of the Swiss Army Knife. Electronic parts are covered by a two-year warranty. If your Swiss Army Knife has a manufacturer's defect covered by our warranty, we will either repair or replace it, at our option, without charge when it is returned to a Victorinox Authorized Dealer or sent to:

Service Center:

Victorinox Swiss Army, Inc. • 7 Victoria Drive • Monroe CT 06468-1212

Please include your name, address and phone number with your return.

REPAIRS

A damaged Swiss Army Knife not covered by the warranty can be repaired for a nominal fee. Please return the damaged Swiss Army Knife with a letter explaining the requested repair, to the above address. You will then receive a letter confirming the cost of that repair before the repair is done. Mail form with check, money order or credit card information or call our customer service number to give approval with credit card number.

CUSTOMER SERVICE



Only when you see the name Victorinox® stamped on the blade can you be assured you have the Original Swiss Army™ Knife.

Customer Information • 1-800-442-2706

OUR LEGACY

Victorinox produces and sells unique, high quality products worldwide which are of practical use in differing areas of life: Swiss Army Knives, Cutlery, Timepieces, Travel Gear, Fashion and Fragrances.

The head office of the company is in Ibach, Schwyz, in the heart of Switzerland, where founder Karl Elsener first set up his cutler's business in 1884 and, a few years later, designed the legendary "Original Swiss Army Knife".

14378 REV2010

 **VICTORINOX**

ALTIMETER™

 
OUR PRODUCTS

For more information about our complete line of products, please visit us on-line at www.swissarmy.com.

© Victorinox Swiss Army, Inc. 2010. All Rights Reserved.

ALTIMETER™

Operating ranges Altitude: -100 to +6000m (-300 to +18000 ft)
 Temperature: -20° to +60°C (0° to +140° F)

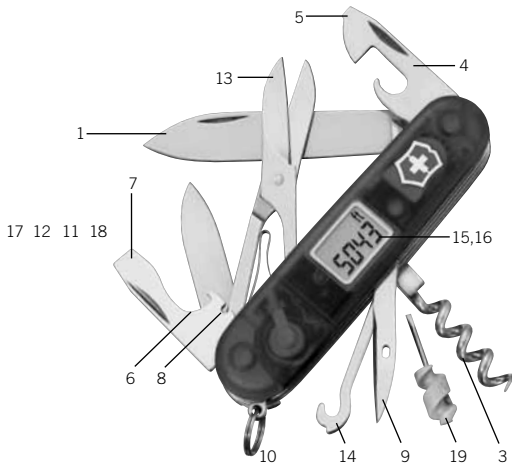

FEATURES

- | | |
|-----------------------|-------------------------------------|
| 1 Large Blade | 11 Tweezers |
| 2 Small Blade | 12 Toothpick |
| 3 Corkscrew | 13 Scissors |
| 4 Can Opener with | 14 Multi-Purpose Hook |
| 5 – Small Screwdriver | (Parcel Carrier) |
| 6 Bottle Opener with | 15 Digital Altimeter |
| 7 – Large Screwdriver | 16 Digital Thermometer |
| 8 – Wire Stripper | 17 Pressurized Ball Point Pen |
| 9 Reamer | 18 Straight Pin |
| 10 Key Ring | 19 Patented Mini-Screwdriver |
| | (20 Wood Saw – Altimeter Plus only) |

For shipping purposes the battery was put in upside down.
 Remove battery and install correctly.

 
Calibration

Altimeters calculate altitude on the basis of air pressure. For this reason, any altimeter has to be recalibrated prior to use owing to daily fluctuations in air pressure. The altimeter has to be reset at a known altitude (e.g. at home, at a railway station, mountain cottage, etc.) to this altitude.

Turning on Digital Display

Press and hold the Cross and Shield for 4 seconds until information appears on the display. Either the temperature or the altitude will appear depending on how long the display was last set. To toggle between Altitude and Temperature modes, press the Cross and Shield.

Setting Combinations

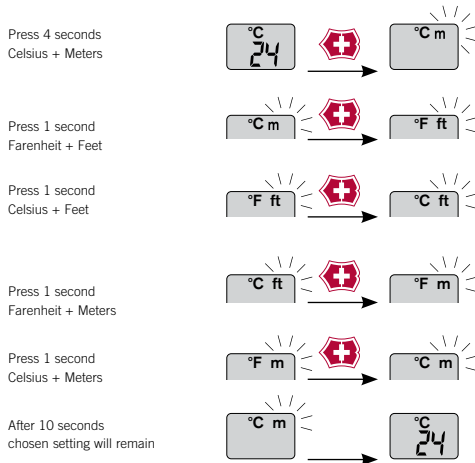

Adjusting the altitude

In altitude mode, press and hold the Shield for 4 seconds until the up and down arrows appear. Release the Shield. The up and down arrows will flash alternately. To increase the elevation displayed, press the Shield repeatedly while the arrow is up. To decrease the elevation, press the Shield repeatedly while the arrow is down. Once the display shows the correct elevation, wait 4 seconds until the display stops flashing. The display will switch itself off automatically after 15 minutes if not in use.

